


BC 2700 XCE

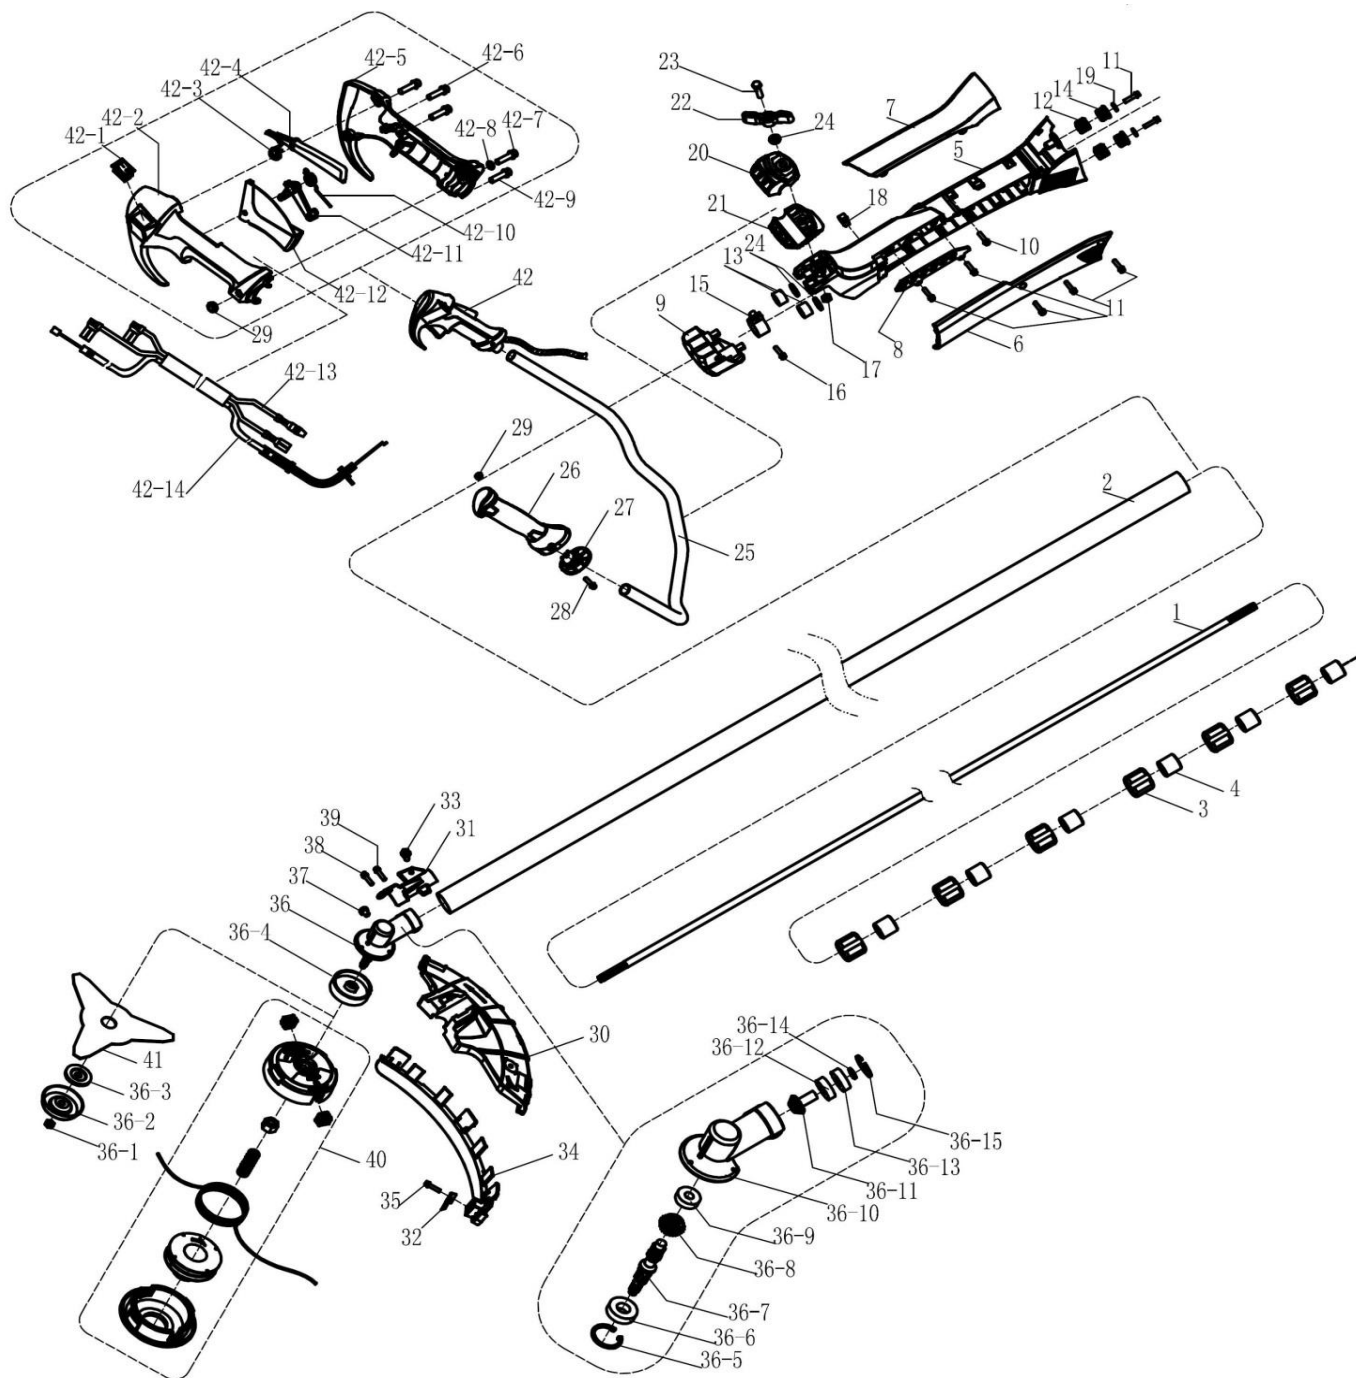



EXPLODED PARTS LIST


Year: 2017
Page(s): 2/4

BC 2700 XCE

No	Code	Name	Qty	No	Code	Name	Qty
1	048489	DRIVER SHAFT	1	42-7		SCREW	1
2	048490	AL TUBING	1	42-8		PLATE WASHER	1
3		RUBBER	6	42-9		ST SCREW	1
4		BEARING	6	42-10		SPRING \ TRIGGER	1
5	50686	VIBRATION COVER	1	42-11		ADJUSTING ROD	1
6	048491	VIBRATION SIDE COVER	1	42-12		TRIGGER	1
7	048492	VIBRATION UPPER COVER	1	42-13		WIRE CABLE	1
8	55981	HANGING BOARD	1	42-14	048503	THROTTLE CABLE ASSEMBLY	1
9	048493	DAMPING SUPPORTING SEAT	1				
10		SCREW	1				
11		SCREW	7				
12	048494	SHOCK ABSORBER SPRING	2				
13	048495	FRONT SHOCK ABSORPTION SLEEVE	2				
14	048496	REAR SHOCK ABSORPTION SLEEVE	2				
15	55983	LOCKING HOOP	1				
16		SCREW	1				
17		NUT	1				
18	55982	WIRE HOLD	1				
19		PLATE WASHER	2				
20	048497	UPPER CLAMP	1				
21	048498	LOWER CLAMP	1				
22	50687	LOCK KNOB	1				
23		SCREW	1				
24		PLATE WASHER	1				
25	048499	AL TUBING	1				
26	55988	RUBBER HANDLE	1				
27	55989	LEFT HANDLE CLAMP	1				
28		SCREW	1				
29		NUT	1				
30	50688	GUARD	1				
31		CLAMP \ GUARD	1				
32		CUTTING BLADE	1				
33		LOCK SCREW	1				
34		STRAKE OF PROTECTIVE COVER	1				
35		SCREW	2				
36	048500	GEAR BOX ASSEMBLY	1				
37		SCREW	1				
38		SCREW	1				
39		SCREW	1				
40	046932	STRING HEAD ASSEMBLY	1				
41	051314	BLADE	1				
42	048501	CONTROL HANDLE ASSEMBLY	1				
42-1	048502	SWITCH	1				
42-2		PLASTIC HANDLE \ LH	1				
42-3		SPRING \ TRIGGER	1				
42-4		LOCK TRIGGER	1				
42-5		PLASTIC HANDLE \ RH	1				
42-6		SCREW	3				

Appliance

BC 2700 XCE

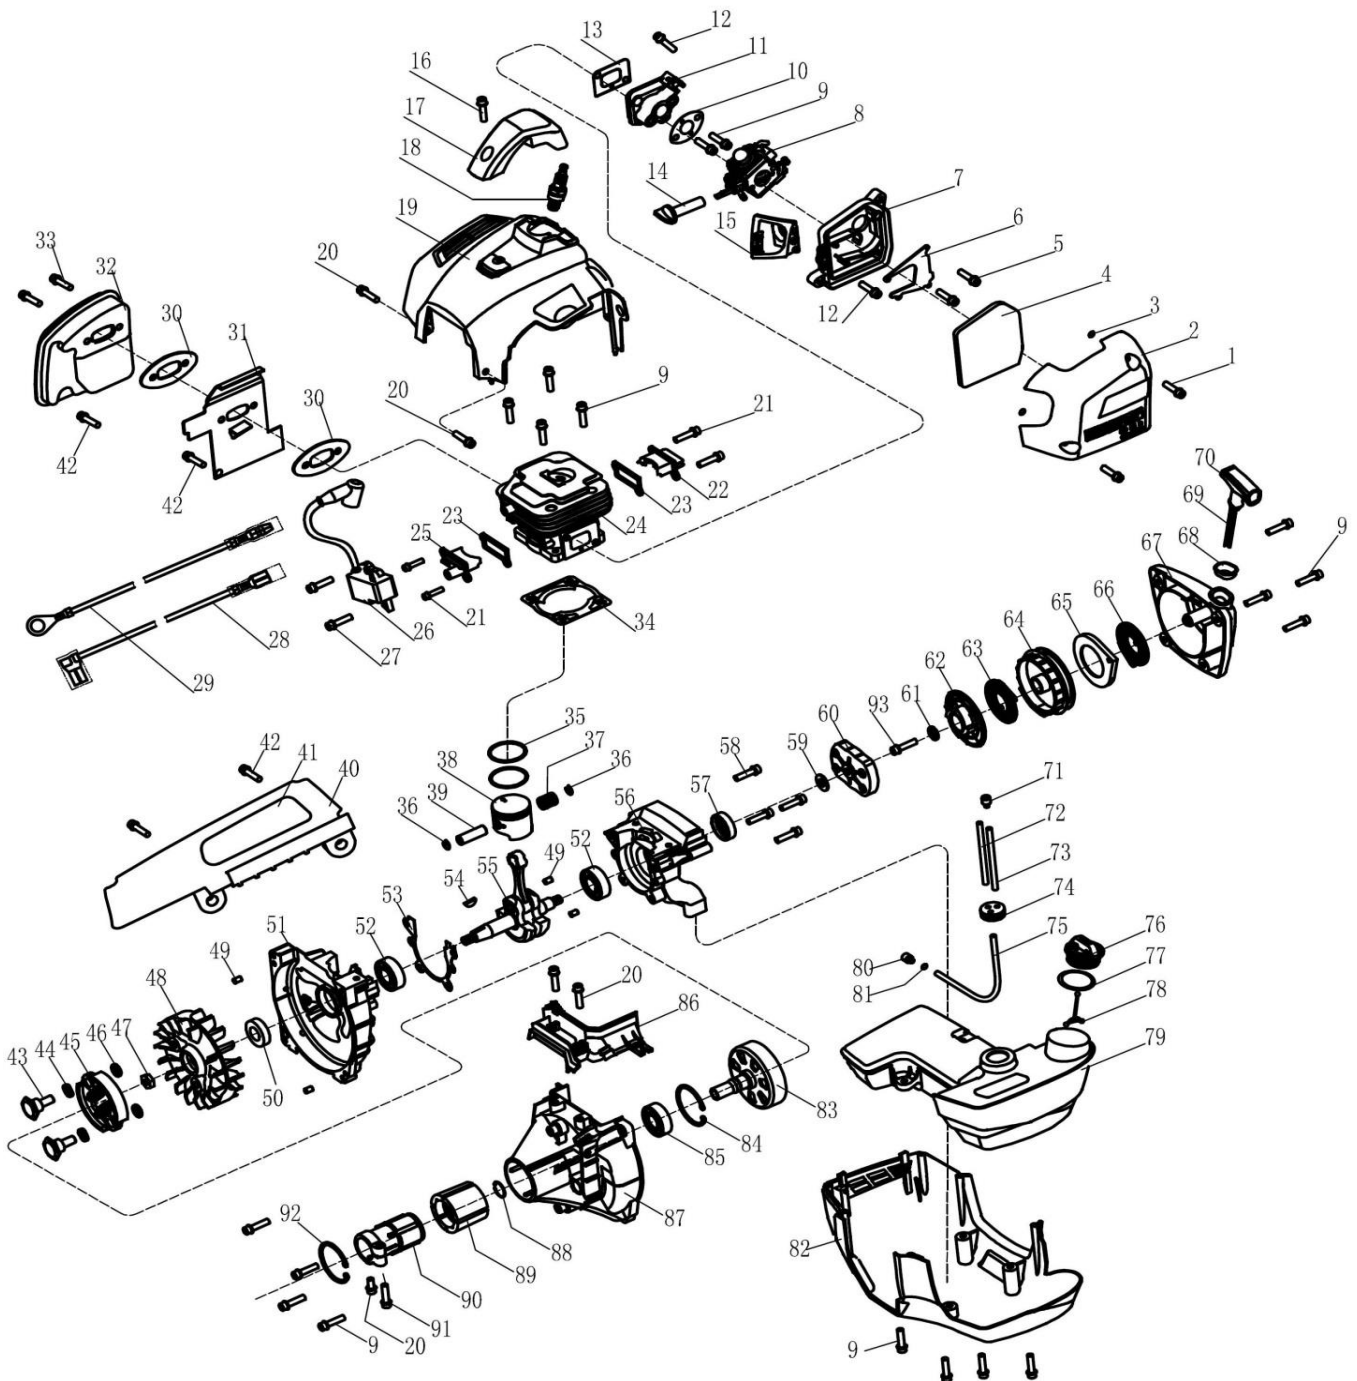

Engine



EXPLODED PARTS LIST

Year: 2017

Page(s): 4/4

BC 2700 XCE

No	Code	Name	Qty	No	Code	Name	Qty
1		SCREW	2	49		PIN	2
2	048449	AIR BOX COVER	1	50	012355	OIL SEAL	1
3		O RING	2	51	048467	CRANK CASE LH SIDE	1
4	048450	SPONE	1	52	048468	BEARING	2
5		SCREW	1	53	048469	GASKET \ CRANK CASE	1
6	078603	STAMPING	1	54	032478	KEY	1
7	048451	AIR BOX BASE	1	55	048470	CRANK SHAFT ASS'Y	1
8	047668	CARBURETOR	1	56	048471	CRANK CASE RH SIDE	1
9		SCREW	2	57	010860	OIL SEAL	1
10	048452	GASKET RUBBER	1	58		SCREW	4
11	050685	ADMITTING PIPE	1	59		FLAT WASHER	1
12		SCREW	1	60	048472	START REEL	1
13	048453	GASKET	1	61		PLATE WASHER	1
14	048454	THROTTLE HANDLE	1	62	048473	RATCHET WHEEL	1
15	078598	FAN COVER	1	63	048474	LARGE SPRING	1
16		SCREW	1	64	048475	START PULLEY	1
17	048455	SPARK PLUG COVER	1	65	048476	COIL SPRING HOUSING	1
18	054715	SPARK PLUG	1	66	048477	COIL SPRING	1
19	048456	TOP HOUSING	1	67	048478	START HOUSING	1
20		SCREW	2	68		EYELET	1
21		SCREW	4	69		START ROPE	1
22	078597	REAR COVER	1	70		START GRIP	1
23	055953	SIDE COVER GASKET	2	71	048479	BALANCER UNIT	1
24	047669	CYLINDER	1	72		AIR TUBE	1
25	078586	FRONT SIDER COVER	1	73		RETURN TUBE	1
26	051262	IGNITION	1	74	048480	RETAINER . FUEL TUBE	1
27		SCREW	2	75		FUEL TUBE	1
28		WIRE A	1	76	048481	FUEL TANK COVER	1
29		WIRE B	1	77		RUBBER BUMP	1
30	048457	GASKET . MUFFLER	2	78		ANTI DROP PLATE	1
31	048458	GASKET . MUFFLER	1	79	048482	FUEL TANK ASS'Y	1
32	048459	MUFFLER	1	80		FILTER FUEL	1
33		SCREW	2	81		TUBING SNAP RING	1
34	048460	GASKET \ CYLINDER	1	82	048483	FUEL TANK HOUSING	1
35	047671	PISTON RING	1	83	048484	CLUTCH DRUM	1
36	047673	CIRCLIP \ PISTON PIN	2	84		CIRCLIP	1
37	048461	BEARING	1	85	048468	BEARING	1
38	047670	PISTON	1	86	078591	PLASTIC PLATE	1
39	047672	PISTON PIN	1	87	048485	CLUTCH DRUM HOUSING	1
40	048462	FUEL TANK BAFFLE	1	88		CIRCLIP	1
41		UPPER COVER HEAT INSULATION FILM	1	89	048486	RUBBER	1
42		SCREW	2	90	048487	CLAMP	1
43	048463	BOLT \ CLUTCH	2	91		SCREW	1
44	048464	WASHER	2	92		CIRCLIP	1
45	048465	CLUTCH ASSEMBLY	2	93		SCREW	1
46		FLAT WASHER	2				
47		FLANGE NUT	1	61-70	050009	STARTER ASSY.	
48	048466	MAGNETO ROTOR	1	71-80	48488	FUEL TUBES WITH HOLDER	

Engine